

DEVAR Inc.

706 Bostwick Avenue, Bridgeport, CT 06605
TEL: 203-368-6751 FAX: 203-368-3747
1-800-566-6822 www.devarinc.com

Instruction Manual Model PB-LPI-NE4

LOOP POWERED
INDICATOR IN
NEMA 4X
ENCLOSURE



Table of Contents

1. General Description	1
2. Installation	2
3. Field Wiring	4
4. Configuration	5
5. Offset Function	7
6. Specifications	8

List of Illustrations

Fig. 1 General Dimensions	2
Fig. 2 Hole Pattern for Surface Mount	2
Fig. 3 -M46 NEMA-4 Panel Mount Dimensions	3
Fig. 4 Typical Wiring	4
Fig. 5 Back of Display Board	6

Section 1



General Description

The PB-LPI-NE4 is a two-wire digital indicator that monitors a 4 to 20 mA process signal and provides local indication on a liquid crystal display. The meter features four active digits with half inch high, easy to read characters that can be displayed with or without backlight. The meter requires no external power supply as it derives its power directly from the 4 to 20 mA input signal, dropping only one volt across its input terminals when the backlight is not used and approximately five volts when the backlight is turned on.

The PB-LPI-NE4 provides a digital readout directly proportional to the milliamp input. The indicator is configured at the factory to display zero to one hundred percent for a 4 to 20 mA input signal, however it can be easily reconfigured in the field to read directly in engineering units (e.g. °F, GPM, feet of water ...). Configuration of the PB-LPI-NE4 is accomplished using three buttons located at the rear of the display. The display can be forward or reverse acting and can be configured to display any combination of numbers between -1999 and +9999. The PB-LPI-NE4 is housed in a NEMA-4X polycarbonate enclosure.

Section 2 Installation

To surface mount the meter located on the back of the enclosure are four #6 mounting holes below the cover screws. See Fig. 2 for hole pattern. Devar can install a conduit fitting at the factory (Option -M42) or any openings for conduit fittings should be drilled in the short side of case. Other options for installation include a 2" Diameter Pipe Mount Kit (-M36), SnapTrack Mount (-M31), and a NEMA-4 Panel Mount (-M46) see Fig. 3.

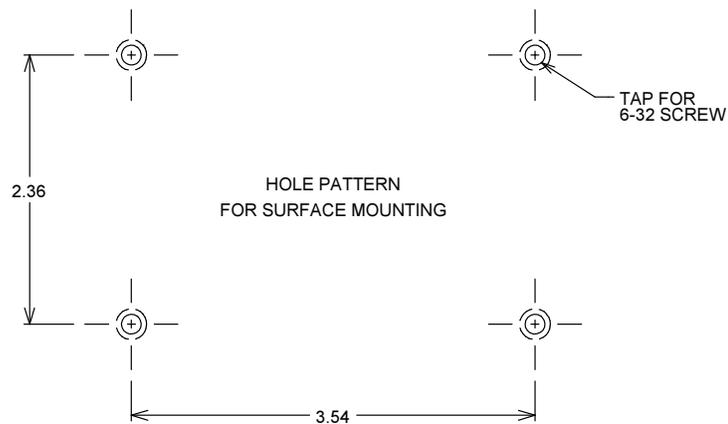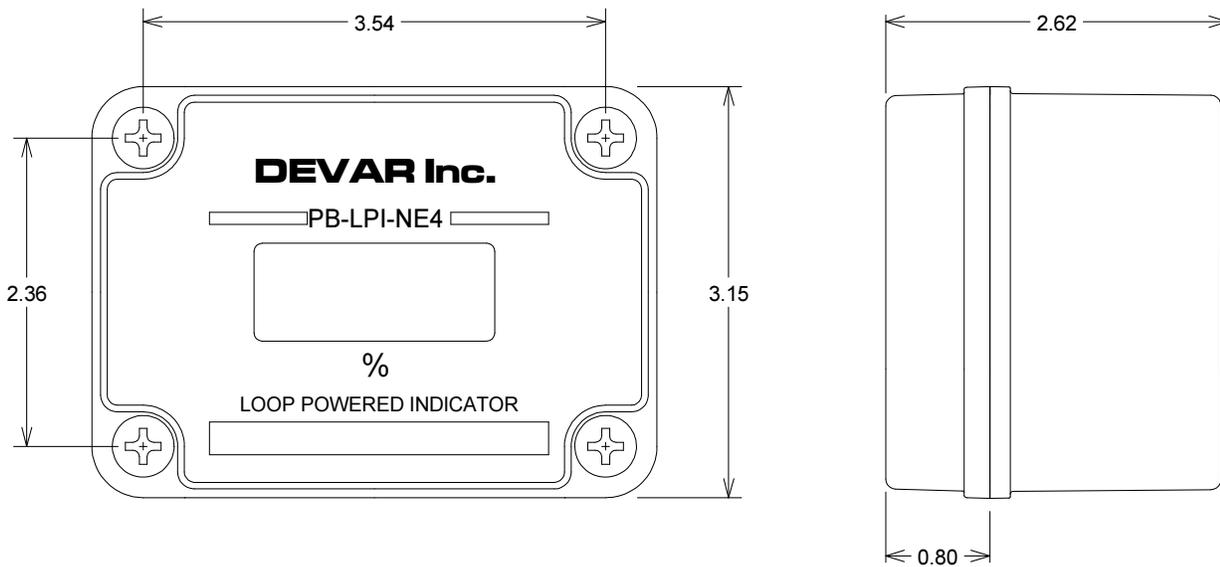

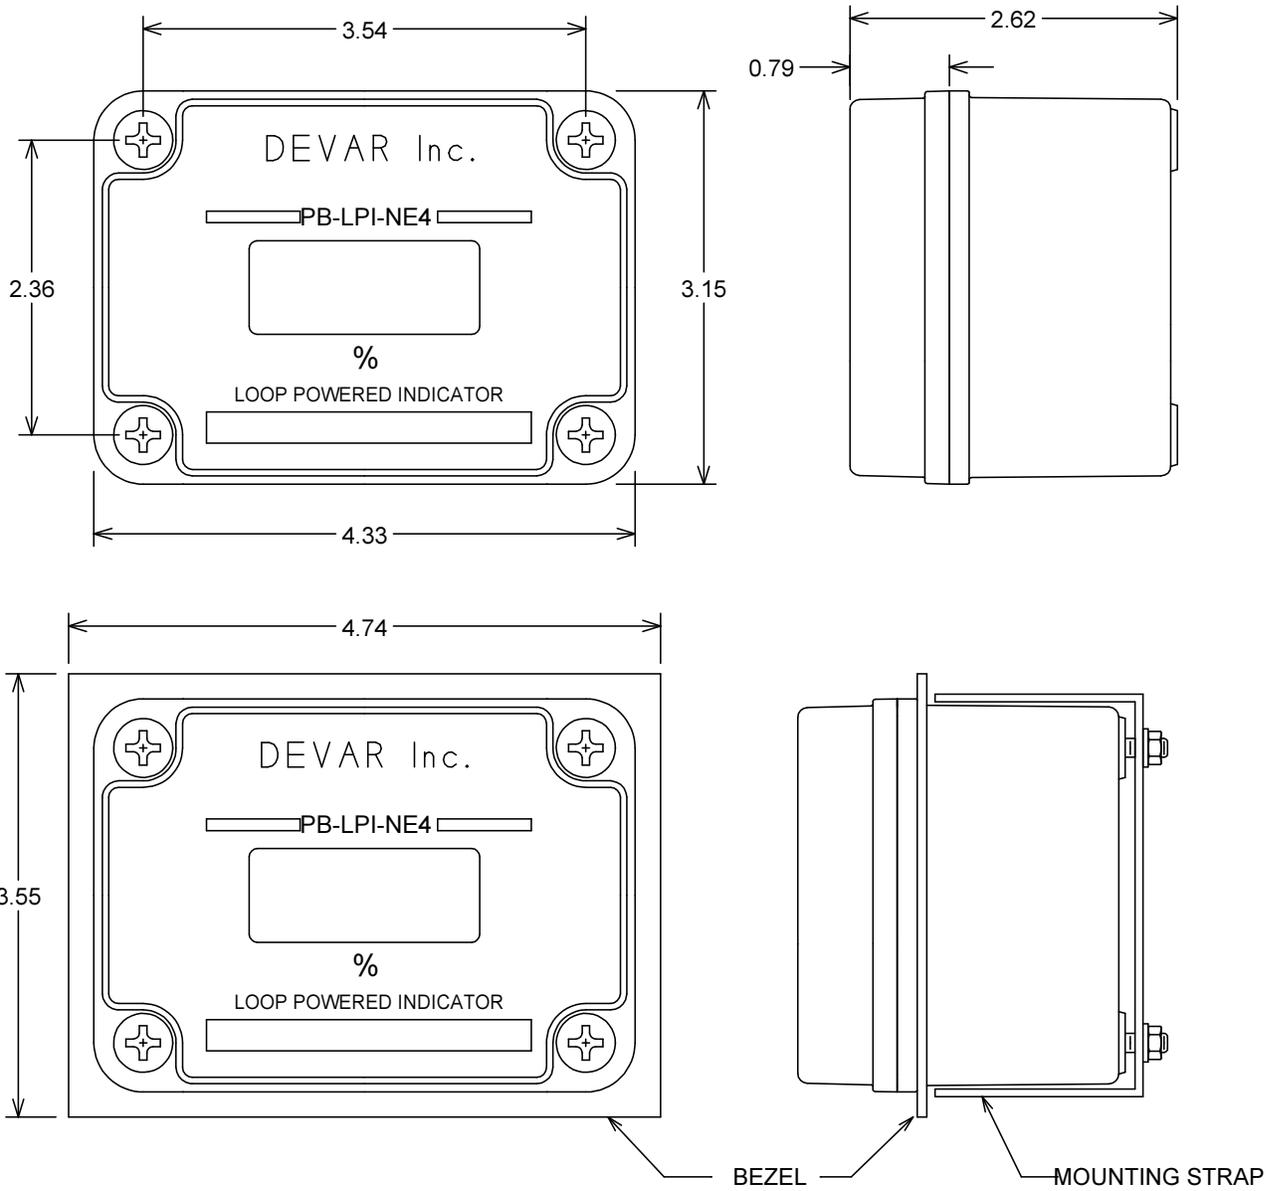


Fig. 3: Option -M46 NEMA-4 Panel Mount Dimensions

Section 3 Field Wiring

A four position terminal block is provided at the rear of the meter for field wiring. To operate the meter with the backlight turned on, wire between the **+IN A** and the **-IN** terminals. To operate the meter with the backlight turned off, wire between the **+IN B** and the **-IN** terminals. A **SPARE** terminal is also provided as a tie point.

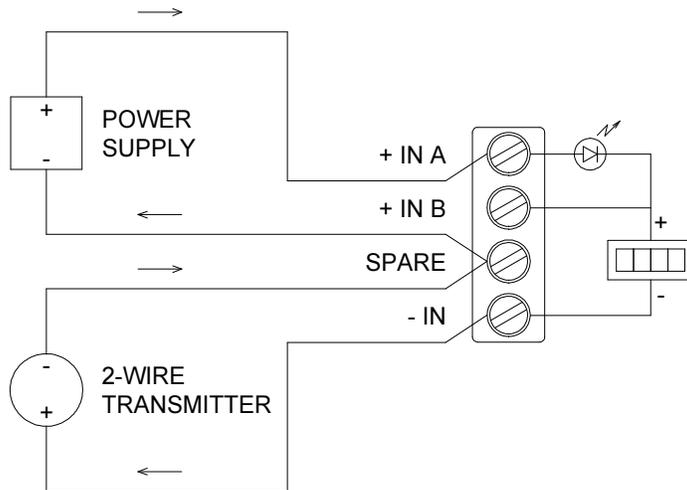


Fig. 4: Typical Wiring
showing a 2-wire transmitter powered by an external power supply with the backlight turned on

Section 4

Configuration

The PB-LPI-NE4 is configured at the factory to display 0 to 100% for a 4 to 20 milliamp input signal. Reconfiguration is easily accomplished using the “**MOVE**”, “**SCROLL**” and “**FUNCTION**” buttons located on the back of the display board. See Fig. 5 on pg 6. Access the buttons by unscrewing the (4) screws of the enclosure and slowly pop off the round Display Board from the (2) standoffs inside. To configure the PB-LPI-NE4 the meter is put into the **Configuration Mode** where the user will be prompted to set the following operating parameters:

1. (**dP**) Position of decimal point
2. (**HI**) Number displayed at 20 mA
3. (**LO**) Number displayed at 4 mA
4. (**OFFS**) Offset (or zero shift) applied to reading

4.1 Enter Configuration Mode

There are two ways to enter the **Configuration Mode**. The first is to apply a signal to the indicator. As the indicator powers up, the configuration prompt **CO n F** appears. The second method is to simultaneously press all three buttons on an operating meter for a period of five seconds. This action also causes the configuration prompt to appear. Once the configuration prompt appears, the operator has 30 seconds to press the **FUNCTION** button and begin configuration.

4.2 Define position of the Decimal Point

The first prompt to appear is **dP**. Press the **FUNCTION** button to display “1 2 3 . 4”. Use the **MOVE** button to change the position of the decimal point and then press the **FUNCTION** button to enter your selection. The meter will momentarily display **dOnE** indicating that the selection has been entered.

4.3 Define number displayed at 20 mA

The second prompt to appear is **HI**. Press the **FUNCTION** button to display a four-digit number. The active digit will be flashing. Use the **SCROLL** button to change the value of the active digit and then use the **MOVE** button to move to the next digit. Once all the digits are reading correctly, press the **FUNCTION** button to enter your selection. The meter will momentarily display **dOnE** indicating that the selection has been entered.

4.4 Define number displayed at 4 mA

The third prompt to appear is **LO**. Press the **FUNCTION** button to display a four-digit number. The active digit will be flashing. Use the **SCROLL** button to change the value of the active digit and then use the **MOVE** button to move to the next digit. Once all the digits are reading correctly, press the **FUNCTION** button to enter your selection. The meter will momentarily display **dOnE** indicating that the selection has been entered.

4.5 Enter an offset value

The last prompt to appear is **OFFS**. Press the **FUNCTION** button to display a four-digit number. The active digit will be flashing. Use the **SCROLL** button to change the value of the active digit and then use the **MOVE** button to move to the next digit. Once all the digits are reading correctly, press the **FUNCTION** button to enter your selection. The meter will momentarily display **dOnE** indicating that the selection has been entered.

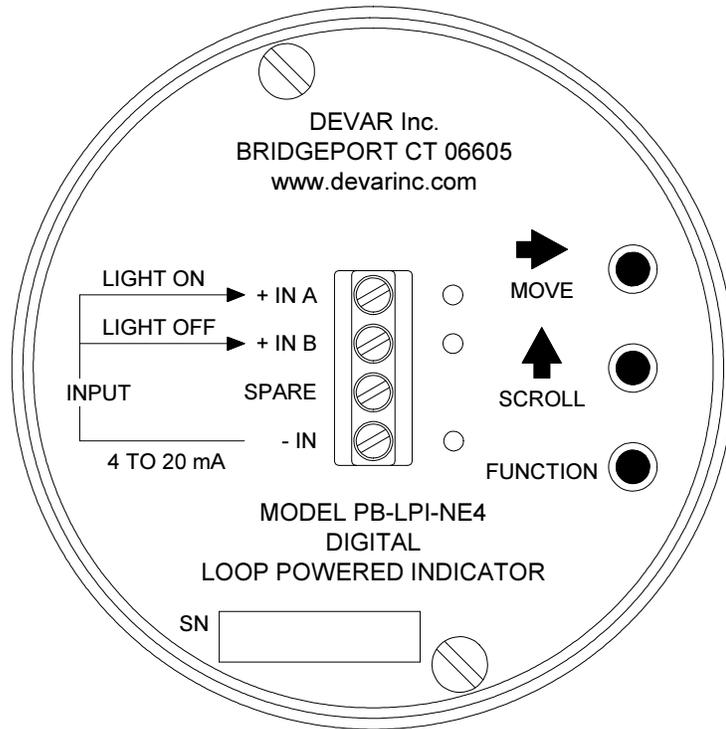


Fig. 5: Back of Display Board

Section 5

Offset Function

The Offset Function allows the user to apply an offset value (or zero shift) to his readings. An example of this is measuring water level in a well using a submersible pressure transducer that is suspended two feet above the bottom of the well. If the transducer outputs 4 mA at zero feet of water and 20 mA at 23 feet of water, the display could be configured as follows:

HI = 23.00

LO = 00.00

OFFS = 02.00

If the transducer was lowered to one foot above the bottom of the well, the offset would be changed to one foot and if the transducer was lowered to the bottom of the well, the offset would be changed to zero feet.

Section 6

Specifications

1. Input
 - a. Range 4 to 20 mA
 - b. Voltage drop (light on) 5.2 VDC
 - c. Voltage drop (light off) 1 VDC
 - d. Maximum forward current 60 mA
 - e. Maximum reverse current 100 mA
2. Display
 - a. Type 4 digit, LCD, 1/2" high digits
 - b. Backlight LED, hyper-orange selected by input wiring
3. Configuration
 - a. Display at 20 mA -1999 to 9999 counts
 - b. Display at 4 mA -1999 to 9999 counts
 - c. Zero offset range -1999 to 9999 counts
 - d. Decimal point User selectable
 - e. Selection method Push buttons
4. Performance
 - a. Resolution 16 bits
 - b. Calibration accuracy $\pm 0.05\%$ of span
 - c. Temperature effect $\pm 0.015\%$ of span / °C, typ.
 - d. Temperature range -30 to +85 °C
5. Enclosure
 - a. Material Polycarbonate
 - b. Rating NEMA-4X